



Edit Linestring Elevation

## Command Description

The Edit Linestring Elevation command enables you to Select a linestring, optionally nominate beginning and end chainages, and one of three modes (none, constant, interpolate) to edit the elevations within that chainage range.

Line:

Edit elevation mode:

Start chainage  End chainage

Show Line Direction Options

Apply OK Close

1. Click in the **Line** selection field and then in a graphic view select the linestring which you want to edit.
2. Pick an **Edit elevation mode** from the list.
  - Option “**None**” will clear any heights within the nominated chainage range.
  - Option “**Constant**” will allow you to enter an **Elevation** that will be made constant within the nominated chainage range.
  - Option “**Interpolate**” will allow you to enter a **Start elevation** and **End elevation** which will apply to the nominated chainage range.
3. Tick the **Start chainage** box and/or the **End chainage** box and enter the chainage values required.
4. Use the **Show Line Direction Options** button to turn on line directions for ease of direction identification.
5. Do either of the following:
  - Click **Apply** to apply the changes and keep the **Edit Linestring Elevation** command pane open.
  - Click **OK** to apply the changes and close the **Edit Linestring Elevation** command pane.

*Note: This command does not currently support Linestrings with Vertical Tab data.*