




## Command Description

The Plan View Rotate command allows the user to rotate the current plan view using the direction of text objects and lines or manually entered bearing.

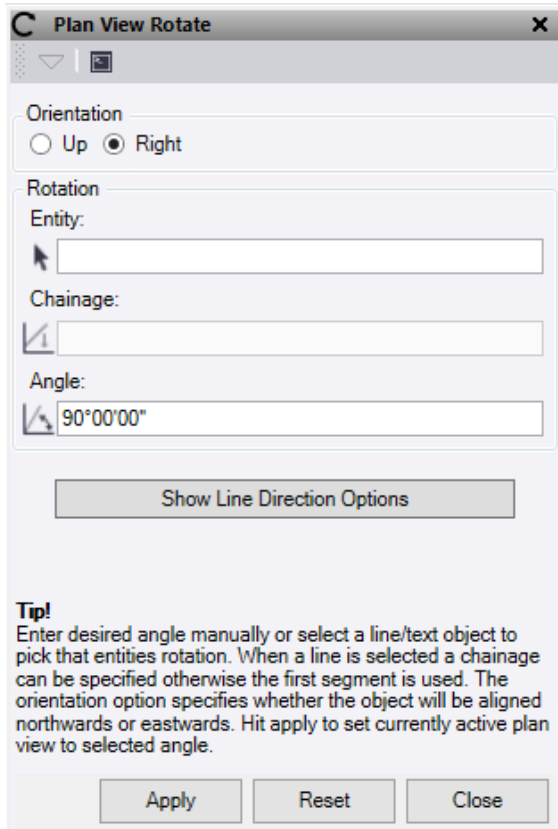

**Tip!**  
Enter desired angle manually or select a line/text object to pick that entities rotation. When a line is selected a chainage can be specified otherwise the first segment is used. The orientation option specifies whether the object will be aligned northwards or eastwards. Hit apply to set currently active plan view to selected angle.

1. Select the **Orientation** option of "Up" or "Right" to determine if the object will be aligned northwards or eastwards.
2. Click in the **Entity** selection field and then in a graphic view select the line or text object to use that entities rotation angle.
3. If a line is chosen, select or enter a **Chainage** to use the bearing from.
4. Enter or use the **Angle** shown to rotate the current view.
5. Use the **Show Line Direction Options** button to turn on line directions for ease of identification.
6. Click **Apply** to rotate the current plan view
7. Click **Reset** to set the current plan view back to default.

**Note:** This will not work on Blocks.